


Installation manual for Cable bracket Kit



Package components

a. U-clip	x 1
b. Cable holder	x 2
c. Bracket	x1
d. Hexagon screws* 4*6mm	x2
e. Zinc screws 4*25.4mm	x2

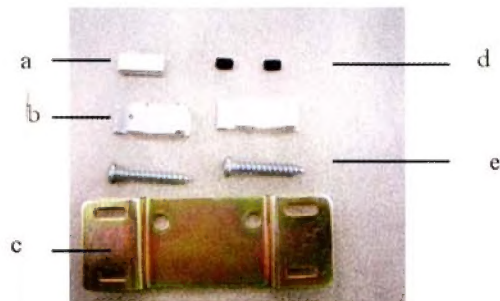


Installation

1. To locate a spot for bracket and door lock actuator. Screw bracket on door panel and fix the cable holders on bracket.
2. Actuator must be mounted parallel to this bracket and cable assembly. Make sure cable can be pushed straight back and forth.

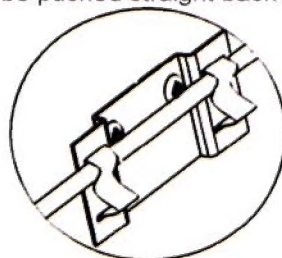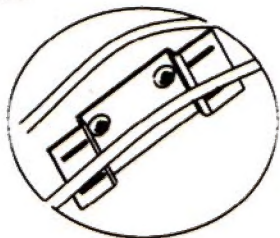


3. IT MUST BE MUCH CAREFUL NOT TO NICK OR CUT THE INNER STEEL CABLE WHILE CONNECTING BRACKET. The cable leather should now be stripped away between the indentations on the bracket. If it becomes necessary to remove the cables from the clamps, the cable must be marked carefully so that it can be reinstalled into the exact same position.

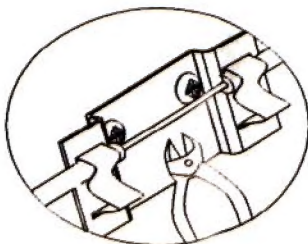


4.

The rod from the actuator is carefully bent so that it lies parallel to the cable about an eighth inch away from it. The rod can be placed either above or below the cable. The clamp is then placed over the rod and saddled onto the cable.

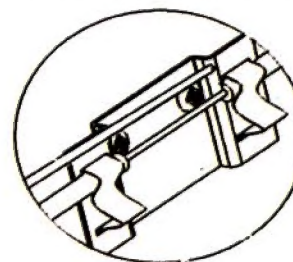

5.

There is a U-Clip insert that fits between the clamp and the cable. This insert must be used to prevent damage to the cable. The lock actuators are adjusted and centered per the instructions, and the hexagon screws on the clamp are tightened.

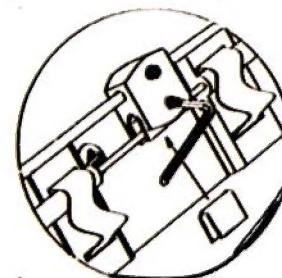

6.

Installation completes.

